


## Rubber Metal antivibration mounts

# LEVELLING MACHINE MOUNTS NF

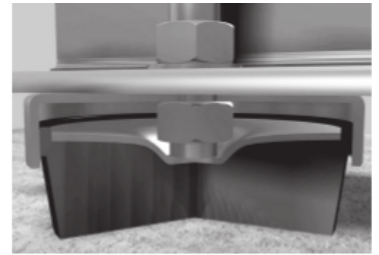


The NF-type AMC Mecnocaucho® mounts are used in cases where light or heavy machines are not fixed to the floor or ground. The height adjustment system can be used to adjust the machines to the required level, thus insulating areas nearby from vibrations and reducing noise. The AMC-Mecanocaucho® type NF comes with a tilting system accomodating uneven surfaces. The elastomer used is a mixture of oil-resistant synthetic Nitrile Butadyene Rubber (NBR).



## Rubber Metal antivibration mounts

# LEVELLING MACHINE MOUNTS NF

### DRAWINGS

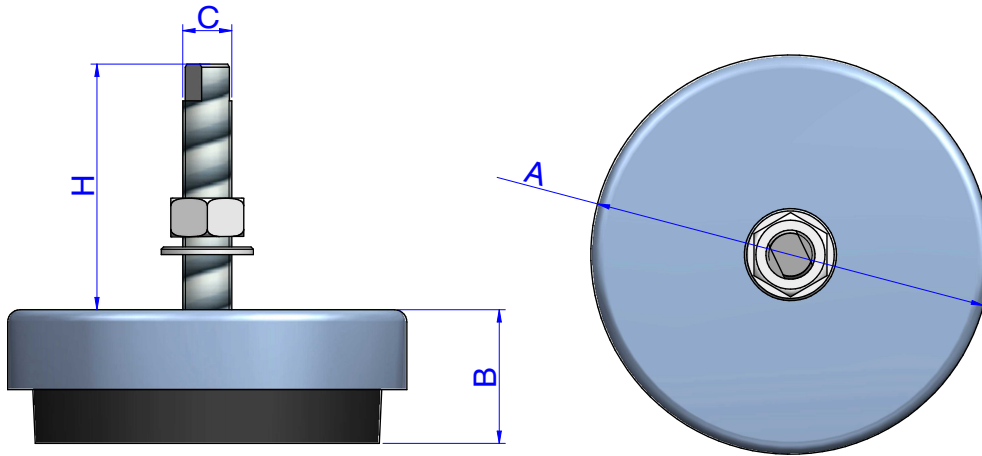

### DIMENSIONS

Type	A (mm.)	C (mm.)	B mm. Min.	B mm. Máx.	B mm. Reglaje	H mm. Min.	H mm. Máx.	STATIC LOAD Nominal Kg.	DEFLECTION mm.	Weight (gr.)	Code
NF-65	65	M-12x1,65	27	34	7	105	110	320	2	349	142001
NF-85	85	M-16x2	33	46	13	114	127	650	2	732	142002
NF-100	100	M-16x2	35	48	13	120	130	980	2	960	142003
NF-130	130	M-20x1,5	45	58	13	130	140	2500	3	1891	142004
NF-160	160	M-20x1,5	53	66	13	130	140	4000	3	3397	142005
NF-200	200	M-24x1,5	55	68	13	158	176	5000	3	4958	142006
NF-250	250	M-30x2	67	85	18	153	176	7000	3	8575	142007

## Rubber Metal antivibration mounts

# LEVELLING MACHINE MOUNTS NF

### OPERATION AND ASSEMBLY



Height is adjusted by means of a screw, once the machine has been assembled. The wide contact between the base of the machine guarantees good overall stability.

Lift the machine and insert the mount under it. Insert and turn the screw manually until it can be wound into the thread in the mount . Adjust the height of the machine by turning the screw. When the machine is level , lock the mounts using the checknuts.