

Rubber Metal antivibration mounts **BUSHINGS**





Bushings have several applications, such as vehicle cabins, motors, etc.



Rubber Metal antivibration mounts

BUSHINGS

DRAWINGS

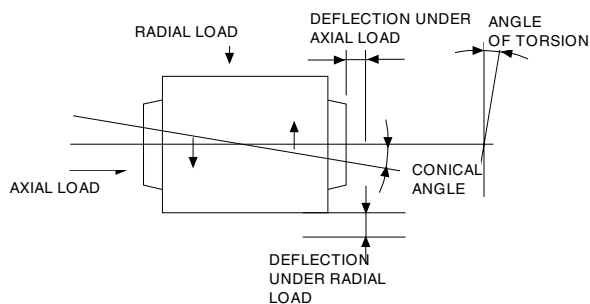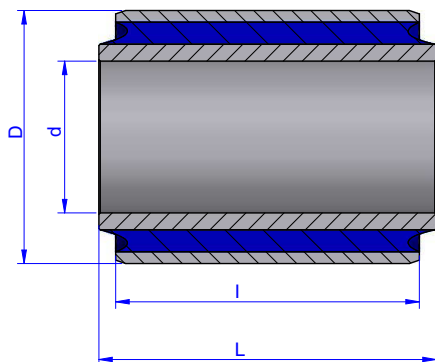

DIMENSIONS

Type	d (mm.)	D (mm.)	l (mm.)	L (mm.)	Torsion Mt max (Nm)	Angle Torsion max (°)	Axial load Fa max (N)	Axial load Sa max (mm)	Radial load Fr max (N)	Radial load Sr max (mm)	Code
BUSHINGS	10	22	25	30	7	10	500	0,9	1875	0,25	154005
	10	22	30	32	9	10	600	0,9	2250	0,25	154006
	12	30	28	34	10	15	580	1,7	1750	0,55	154103
	12	32	55	59	19	16	1200	1,7	7000	0,65	154077
	12	40	40	60	16	20	450	1,8	1200	1	154104
	14	27	40	45	20	10	935	1,3	4400	0,35	154107
	16	32	25	28	12	10	700	1,4	1560	0,4	154020
	16	32	22	30	14	10	750	1,3	1800	0,35	154080
	18	36	48,5	58,5	35	10	1420	1,6	7350	0,45	154021
	20	45	40	35,5	45	15	1600	4,8	5800	1,4	154133
	20	45	64	70	55	15	2200	2,5	10000	0,85	154073
	24	45	44	55	55	11	1840	1,8	8650	0,6	154082
	25	50	50	56	34	6,6	2900	3	10000	1	154040
	25	50	80	85	49	14	7500	7,8	18000	1,7	154044
	32	66	47	55	77	15	2450	3,9	8400	1,3	154079
	40	70	55	65	138	12	3320	3,6	20500	1,2	154043
	45	75	90	100	320	10	6300	3,1	35000	0,9	154075
50	80	100	110	450	9	7800	2,8	55000	0,85	154041	