

## Rubber Metal antivibration mounts

# RUBBER BLOCKS AND MATS TYPE C




There are different mats, in different sizes, rubber grades and hardnesses. The most classic use is for damping high frequency vibrations without the need for anchoring machinery to the floor . The user cuts them to the relevant size and can apply them to the base of the machine using an adhesive, or simply placing them under the base of the machine as required. In cases where contact with oils is foreseen, this should be indicated on the order. The mat will be suitably elastic or anti-skid, depending on the different models.



## Rubber Metal antivibration mounts

# RUBBER BLOCKS AND MATS TYPE C

### DRAWINGS

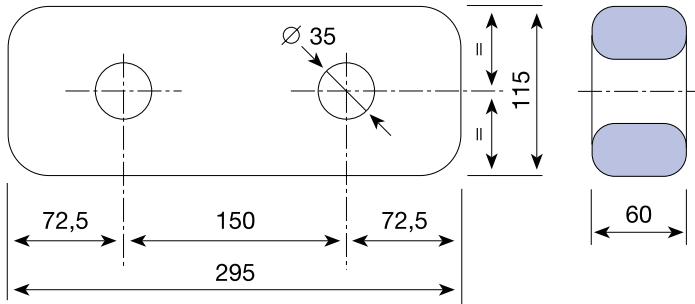

### DIMENSIONS

Type	Load (kg.)	DEFLECTION mm.	Code
RUBBER BLOCKS AND MATS Type C	3000	9	141002